



Item	Part Code	Description	Remarks
1	123022	THREADED CONNECTOR SUPPORT BCL22	
2	131674	BCL21 & 22 INSULATING FOAM	
3	125974	CLAMPING SPRING HOUSING	
4	126051	ASSEMBLY ENGINE-GEARBOX-SHAFT	
5	118349	SEALING CYLINDER BCL22	
6	136877	SCREW COUNTER BLADE	
7	01017	SCHNORR WASHER 6	
8	130040	UPPER CASING BCL22	
9		CENTER BOLT BCL22	KIT A, D
10	BCL22CB	COUNTER BLADE BCL22	
11		BLADE BCL22	KIT E
12		ADJUSTING WASHER BCL22	KIT A,D
13		LOCKING DISK BCL22	KIT A,D
14		KNURLED ADJUSTING NUT - CENTER BOLT	KIT A,D
15	118342	BCL22 PREPARED NUT	
16	118347	PROTECTION FINGER BCL22	
17		SHOULDERED BOLT TDC BCL22	KIT E
18		LINKS (A PAIR)	KIT D
19		SPRING - LINKS BCL22	KIT D
21		FINGER GUARD BCL22	KIT B
22	130044	LOWER CASING BCL22	
23		CYLINDRICAL PIN 3H8-22 INOX	KIT B
24	118666	SCREW CBX M3-10 CL 10.9 Z BLACK	
25	129252	INSULATING FOAM - PINS BCL22	
26		TRIGGER BCL22	KIT C
27		SPRING - TRIGGER BCL22	KIT C
28		CYLINDRICAL PIN 3M6-12 INOX	KIT C
30	125911	ENGINE REAR CIRCUIT BOARD	
A	130049	KIT - CENTER BOLT BCL22	
B	130047	KIT - FINGER GUARD BCL22	
C	128983	KIT - TRIGGER BCL21 & 22	
D	130043	KIT - MAINTENANCE BCL22	
E	BCL22BK	KIT - BLADE BCL22	

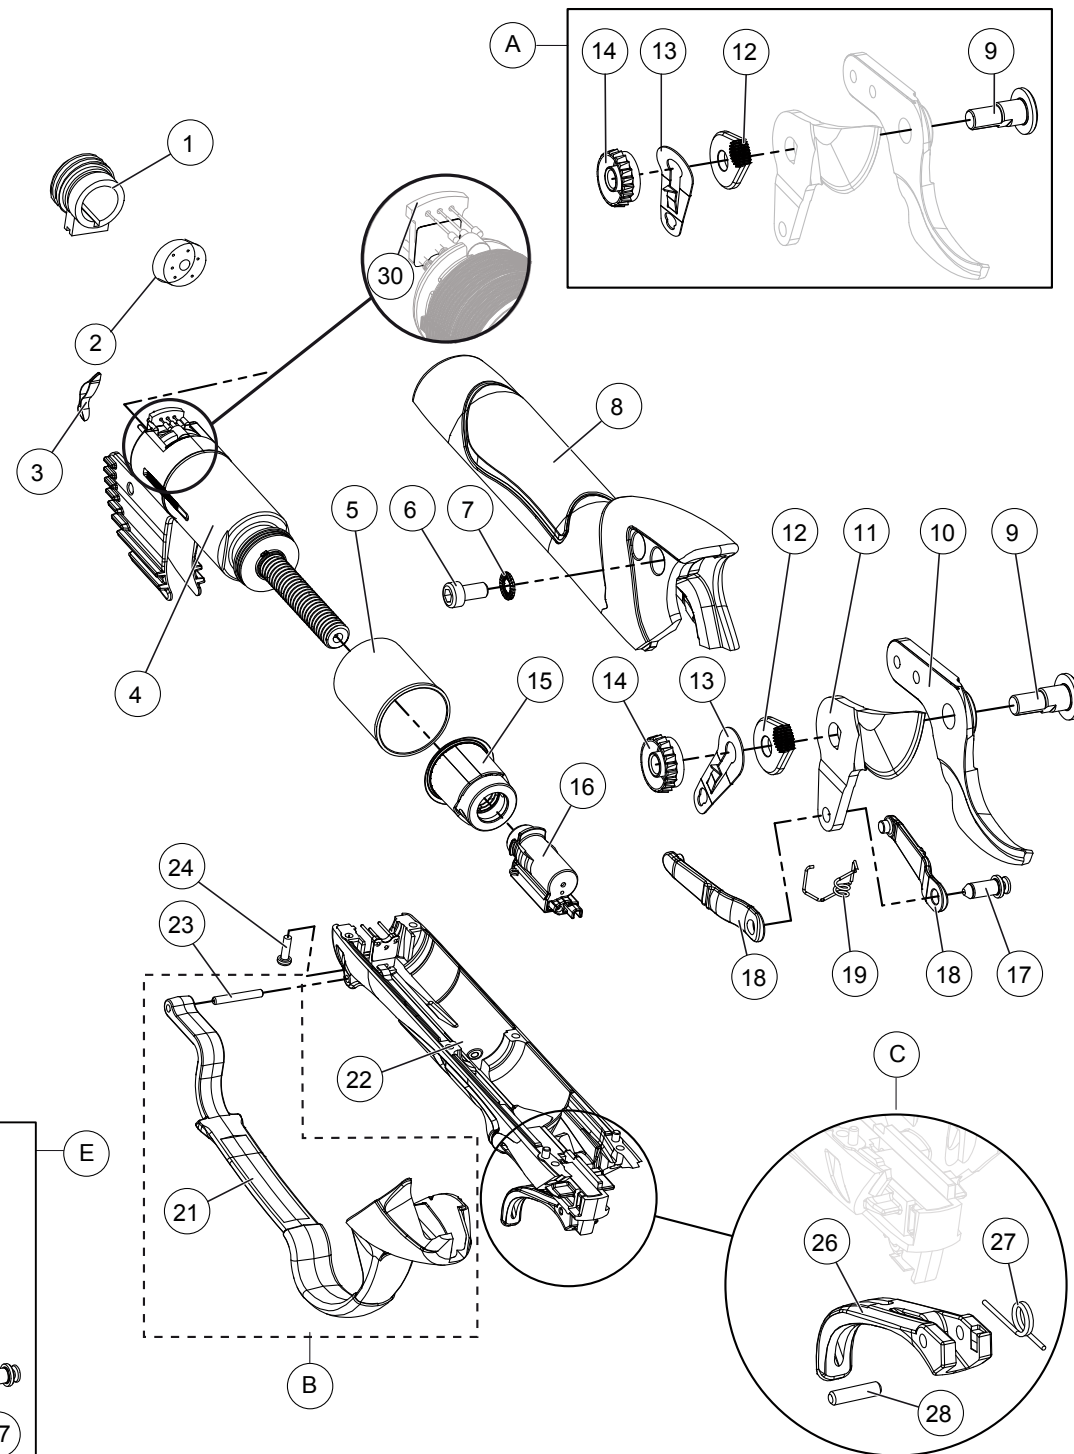


WWW.SNAEUROPE.COM

Item	Part Code	Description
1	126060	BCL22 RADIATOR + REAR BEARINGS
2	125977	BCL22 STATOR COIL + CIRCUIT
3	125976	COMPRESSION SPRING MOTOR
4	128097	BCL22 ROTOR + BELT + PINION PARTS
5	126024	WEAR WASHER GEAR MOT
6	118338	STEEL SATELLITE GEAR
7	118345	AXIS FOR BALL SCREW BCL22
8	68648	STOP WASHER 12*26
9	68647	NEEDLE ROLLER AXK12*26
10	126061	TUBE BCL22 + NEEDLE BUSHING
11	76715	CIRCLIP REINFORCED AS 12x1,5
12	126579	CIRCLIP - SHAFT 12 GROUND EP 1,45
13	126578	CIRCLIP - SHAFT 12 GROUND EP 1,40
14	126577	CIRCLIP - SHAFT 12 GROUND EP 1,35
15	126576	CIRCLIP - SHAFT 12 GROUND EP 1,30
16	126575	CIRCLIP - SHAFT 12 GROUND EP 1,25
17	126574	CIRCLIP SHAFT 12 GR. EP 1.20
18	126573	CIRCLIP SHAFT 12 GR. EP 1.15
19	126572	CIRCLIP SHAFT 12 GR. EP 1.10
20	126571	CIRCLIP SHAFT 12 GR. EP 1.05
21	127236	CIRCLIP SHAFT 12 GR. EP 1.00

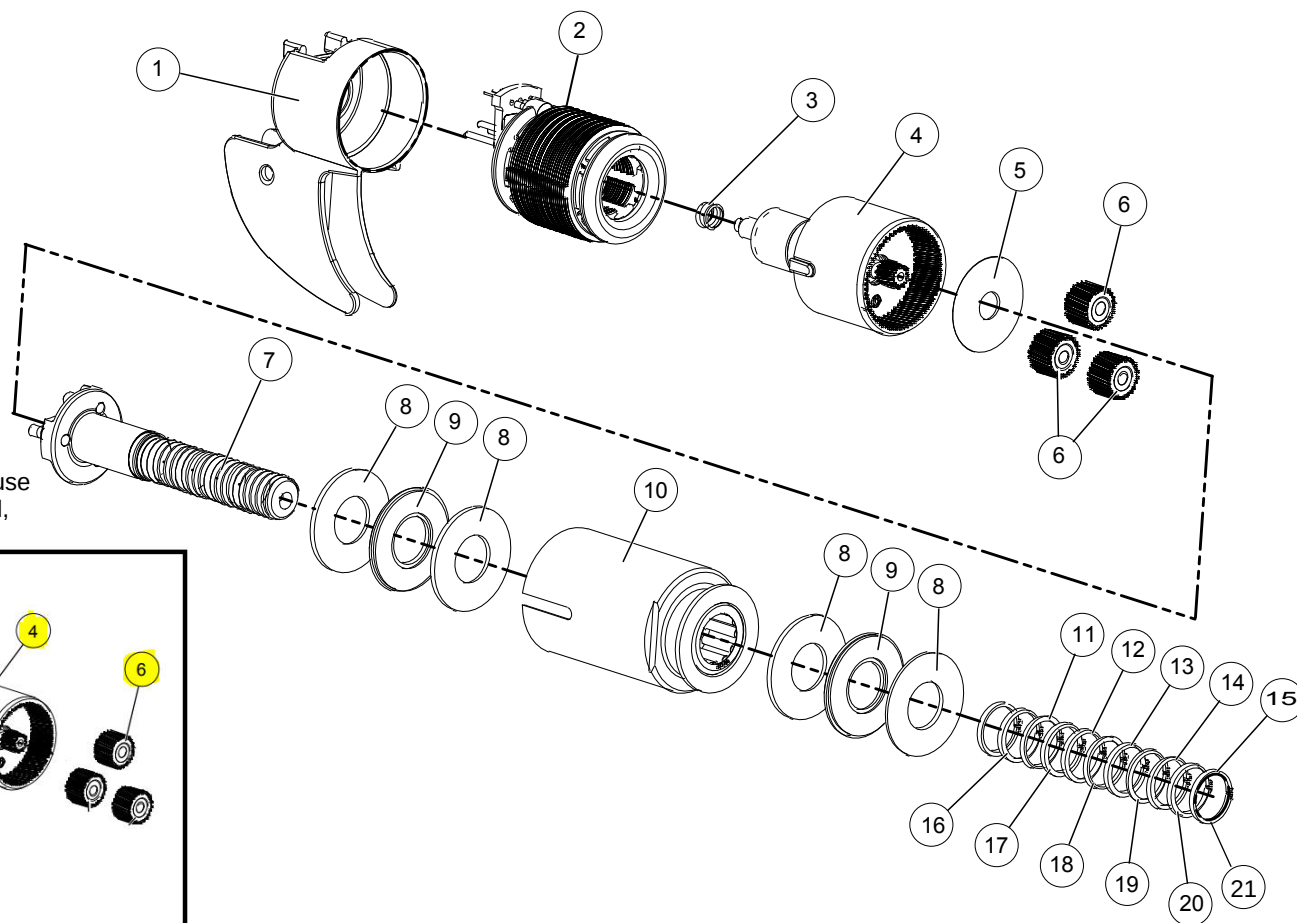

* If the broken part or root cause of the problem is not detected, replace parts 2, 4, 6 & 7:




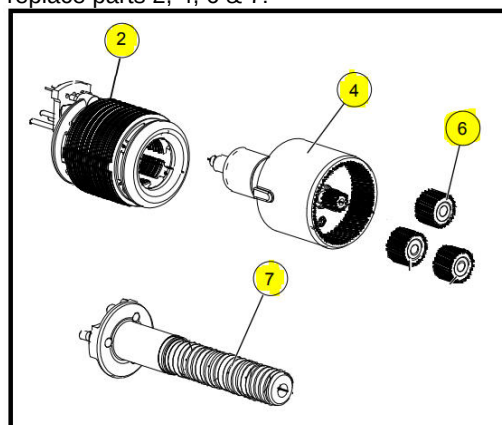


GEARED MOTOR
BCL22



WWW.SNAEUROPE.COM

Item	Part Code	Description	Remarks
1		RIGHT COVER PANEL BCL22	KIT A, B
2		SCREW DELTA PT WN1412 35-20 ZB	KIT A, B
3	112319	SCREW PT Ø2.5x16 TX8	KIT A, B
4		SCREW PT Ø2.5x20 TX8	KIT A, B
5		LEFT COVER PANEL BCL22	KIT A, B
6		UPPER BATTERY COVER BCL22	KIT A, B
7		FOAM -BATTERY PACK 250	KIT A
8	84444	FUSE 40A 58V	KIT A
9		LOWER BATTERY COVER BCL22	KIT A, B
10	BCL22H	CARRIER BELT W/ SHOULDER STRAPS BCL22	
13	BCL1C1A	CHARGER + CABLE EUROPE 06	
14	118417	BCL1B2 BATTERY CARD	
15	118430	SCRW DELTA PT WN50-25	
A	BCL1B2	COMPLETE BATTERY	
B	130046	KIT - BATTERY CASING	

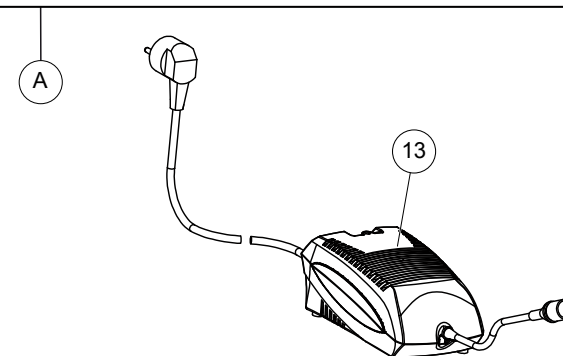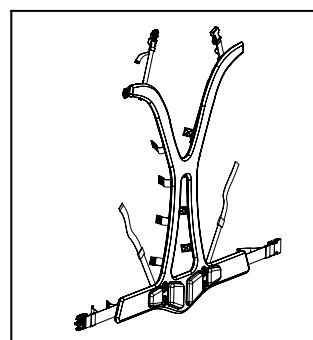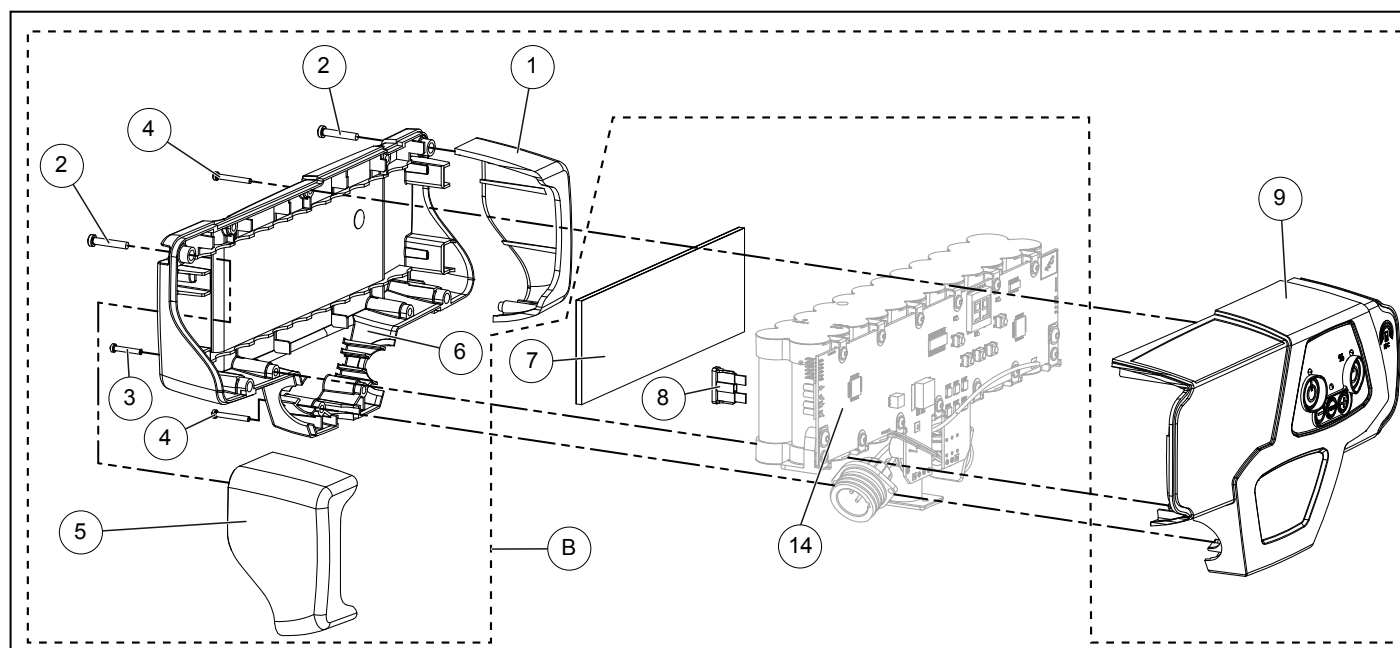
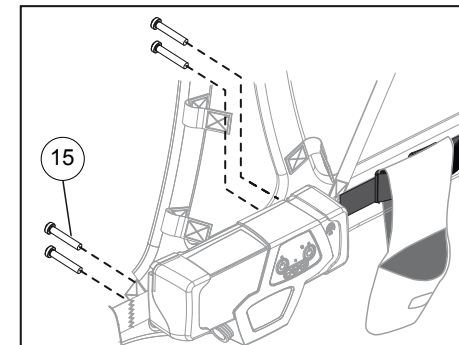


BCL1B2 BATTERY
BCL22



WWW.SNAEUROPE.COM

Item	Part Code	Description
1	BCL21AB	ARMBAND BCL21 & 22
2	BCL2H	HOLSTER BCL21 & 22
3	BCL22C	CABLE 1.4 M BCL21 & 22
4	BCL1C1A	CHARGER + CABLE EUROPE 06
5	BCL22H	CARRIER BELT W/ SHOULDER STRAPS BCL22
6	BCL1B2P	BELT POUCH FOR BCL1B2

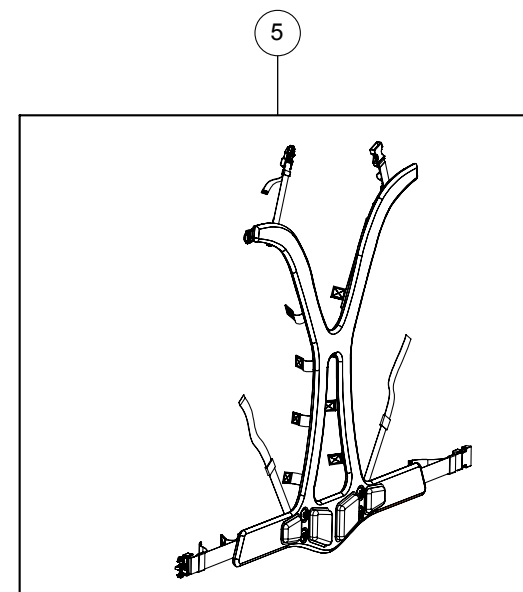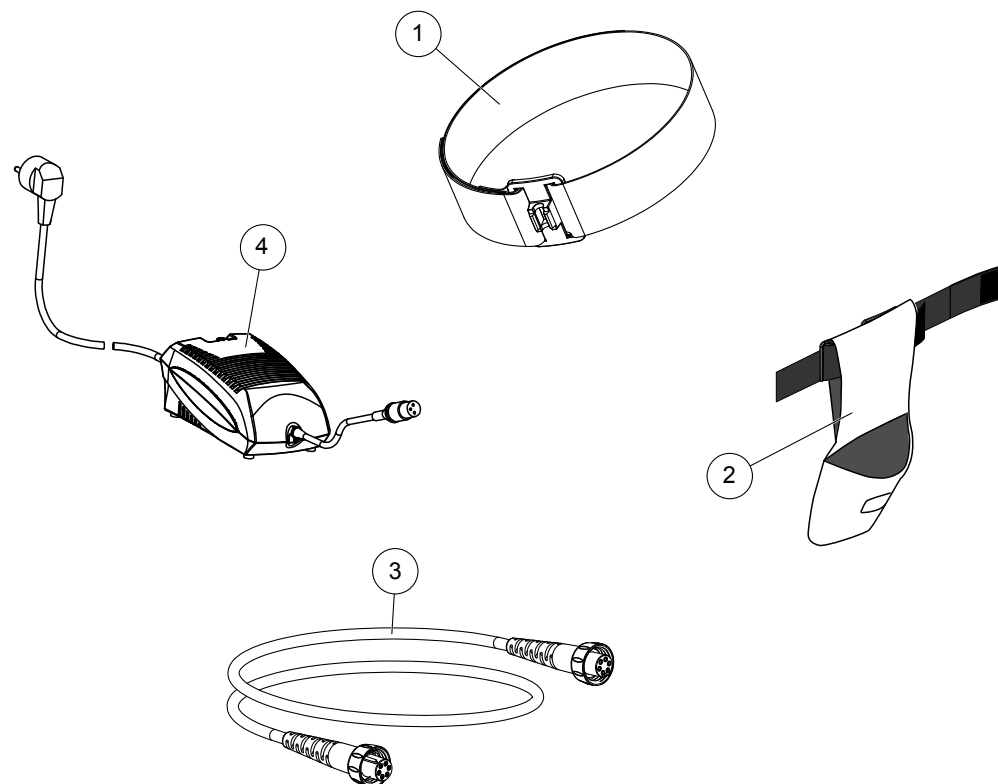


ACCESSORIES
BCL22



WWW.SNAEUROPE.COM

Item	Part Code	Description	Remarks
1	02170	BALL SCREW GREASE (400 G)	
2	84401	GEARING GREASE GR190	
3	129831	BALL BEARING GREASE (400 G)	
4	121596	GREASE CONTACT PLASTIC-METAL	
5		KNURLED ADJUSTING NUT - CENTER BOLT BCL21	KIT A
6		LOCKING DISK BCL22	KIT A
7		ADJUSTING WASHER BCL22	KIT A
8		CENTER BOLT BCL22	KIT A
9		LINKS (A PAIR)	KIT A
10		SPRING - LINKS BCL22	KIT A
11		BLADE BCL22	KIT B
12		SHOULDERED BOLT TDC BCL22	KIT B
A	130043	KIT - MAINTENANCE BCL22	
B	BCL22BK	KIT - BLADE BCL22	

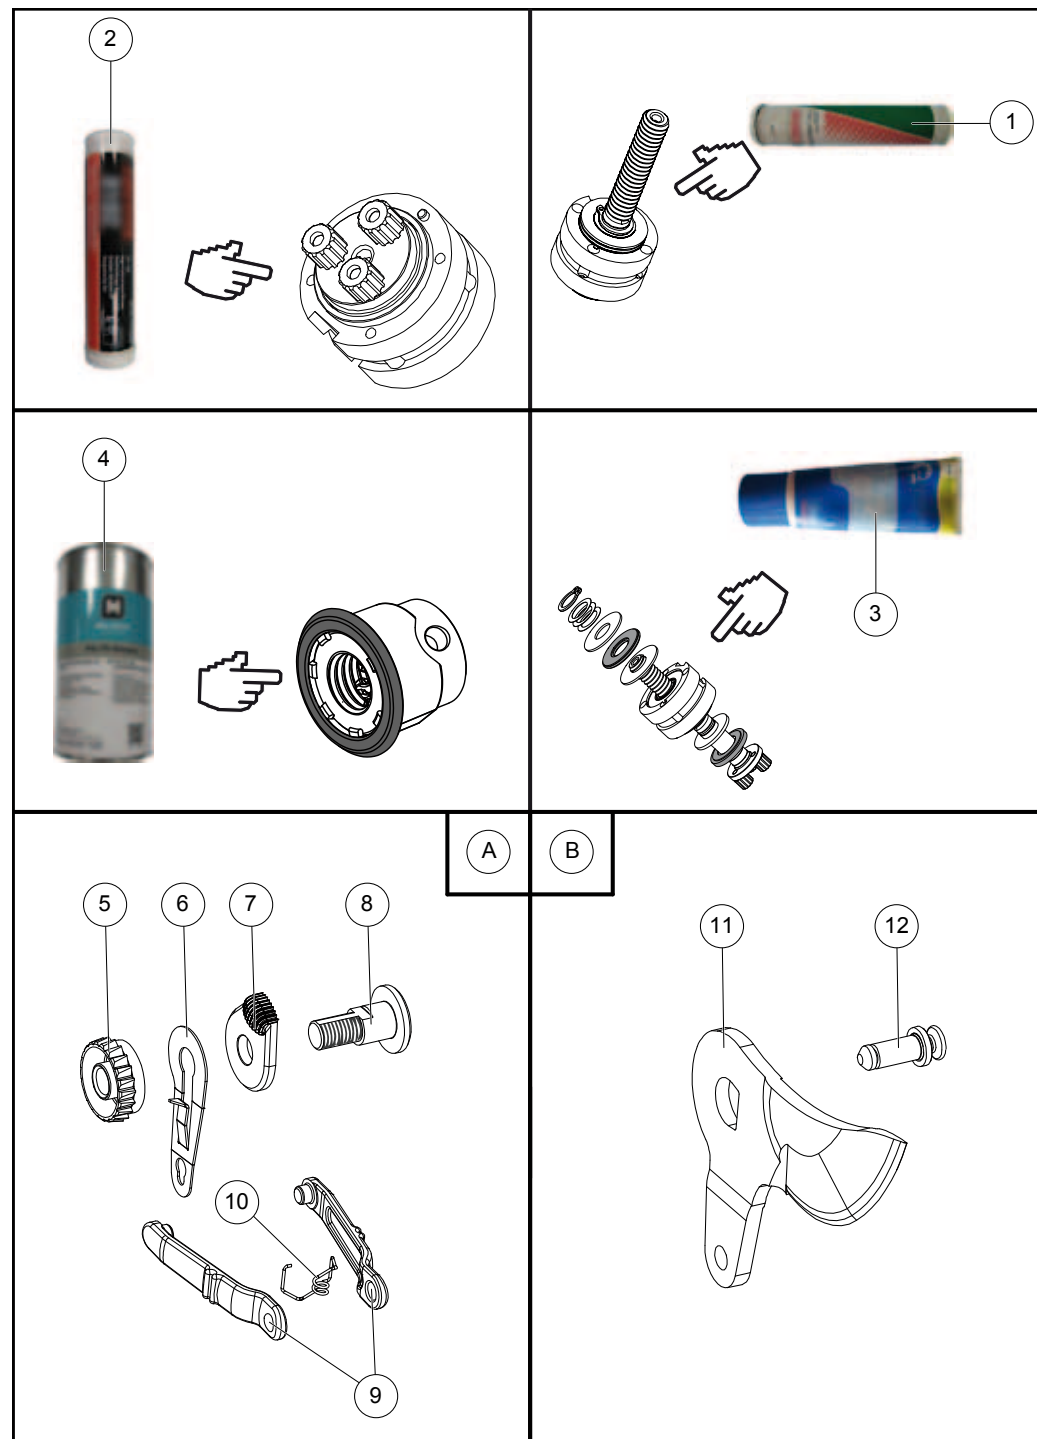

MAINTENANCE
BCL22



WWW.SNAEUROPE.COM